



A powerful Software for SCADA Control, Access Control, Time & Attendance, Payroll, Elevator Control, Car Park Control, Projects Management and Operators Authority Level Control.



# 701 Client Ver. 10.2 EMAIL NOTIFICATION FEATURE CONFIGURATION SETTING

SOYAL TECHNOLOGY CO., LTD.



Ver. 210512


## **Table of Contents**

I.	701Client Email Notification GUI	. 2
II.	Email Server Setting	3-7
III.	Events Triggered Push Email Notification	8-20
	Part 1. QRCODE (suitable for visitor management)	
	Part 2. Fire Event notification	
	Part 3. Alarming Event notification	
	Part 4. Student's absent from school notification to guardian	
	Part 5. Letter Arrival on Mailbox Notification	



Ver. 210512

#### I. 701Client Email Notification GUI

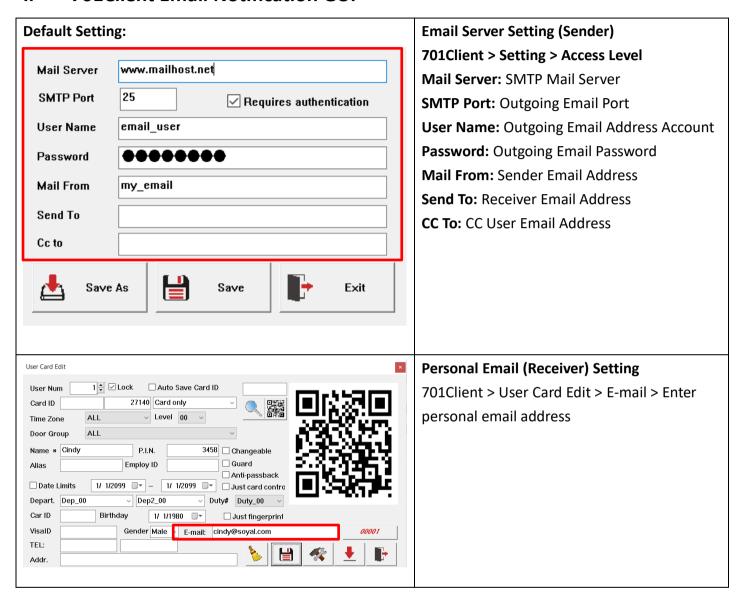



Ver. 210512

#### II. Email Server Setting


Server	SMTP Mail Server:	
Gmail	Mail Server: smtp.gmail.com	
	Port: 587	
Yahoo	Mail Server: smtp.mail.yahoo.com	
	Port: 465	
Local Provider	Mail Server: www.hibox.hinet.net	
(Example: ChungHwa Telecom in Taiwan,	Port: 25	
Server for Business Email is Hibox)		

<u>Note:</u> If you use a Gmail or Yahoo account as your email server outgoing email notification, please opt "less secure app access". This setting required to grant access for TaskBot to send emails using Gmail or Yahoo accounts on your behalf.


#### **Gmail Setting**

Mail Server: smtp.gmail.com

Port: 587

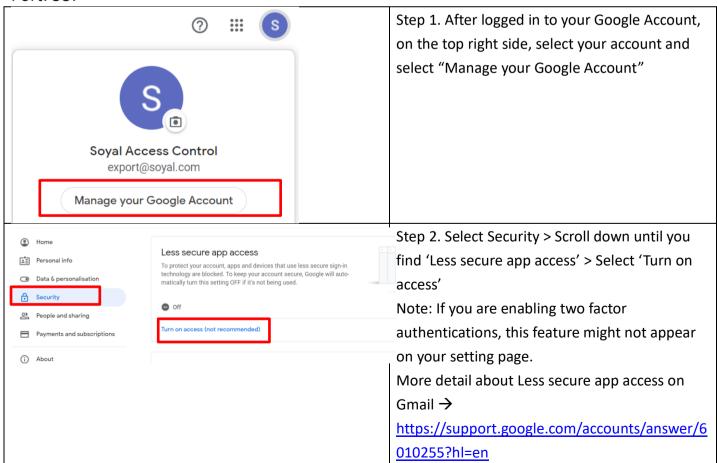



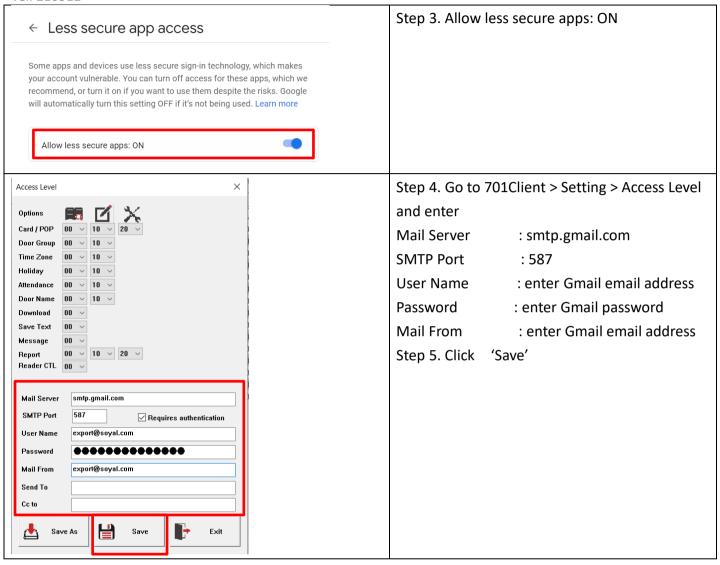




Ver. 210512


#### **Yahoo Setting:**

Mail Server: smtp.mail.yahoo.com


Port: 465

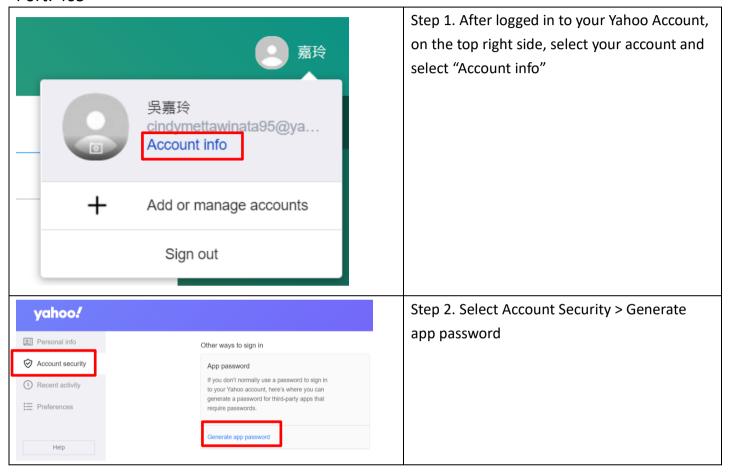



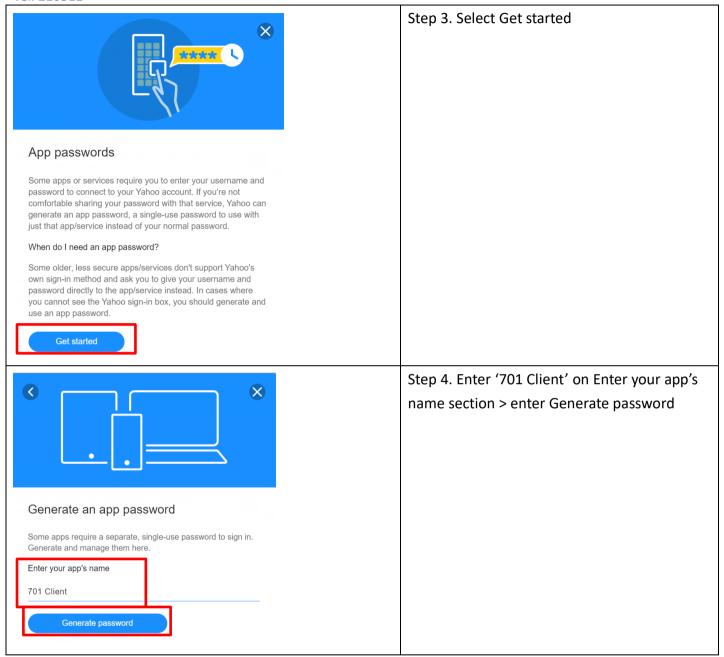



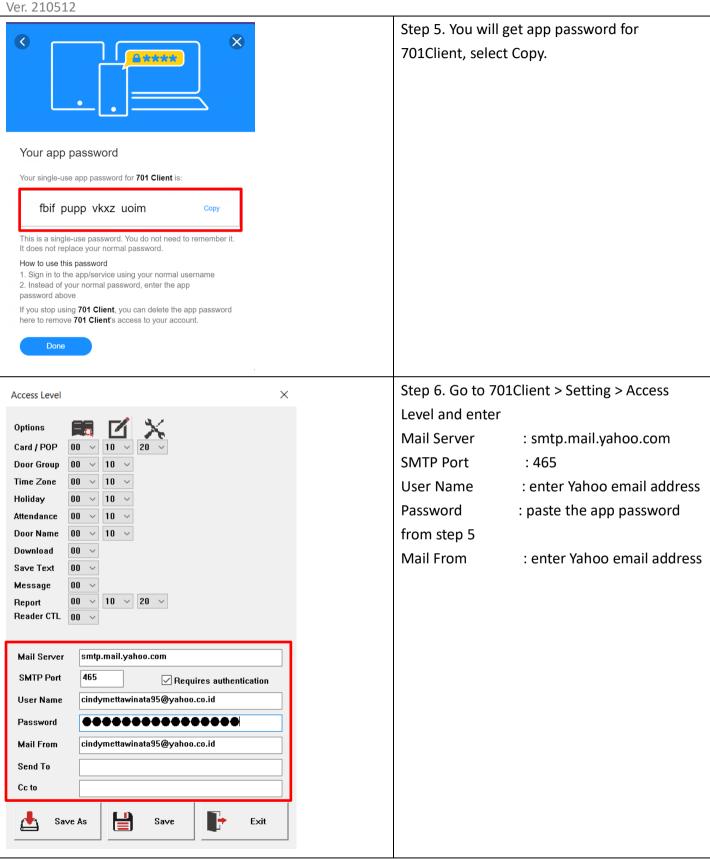



Ver. 210512


#### III. Events Triggered Push Email Notification

#### Part 1. QRCODE (suitable for visitor management)



QRCODE access is easy to implement, access, and low in cost to create it, which is suitable for visitor management. 701 Client could convert card ID and generate it into QRCODE image and send the image to a designated e-mail. This could be use as limited time access identification to pass through a specific door groups, time and date limit (Eligible for Enterprise Series Controller). QRCODE will become invalid after expiration date and time.

#### Setting:

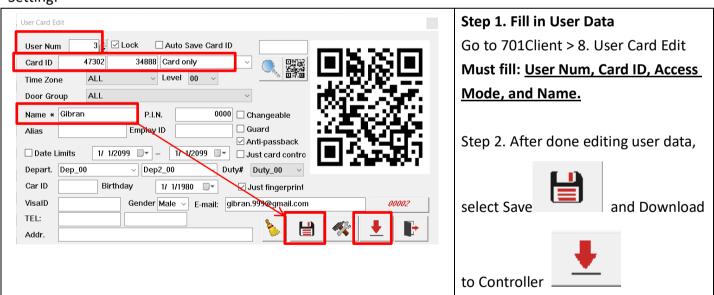

Adding date limit and time limit into for access (suitable for visitor management)

#### **Time Limit Format**

Time must be in 24hours format, hour and minute separate with ':' character, between start and end time separate with '-'

Correct Example: 09:00-17:00




Save

Download to Controller

Save As

Ver. 210512

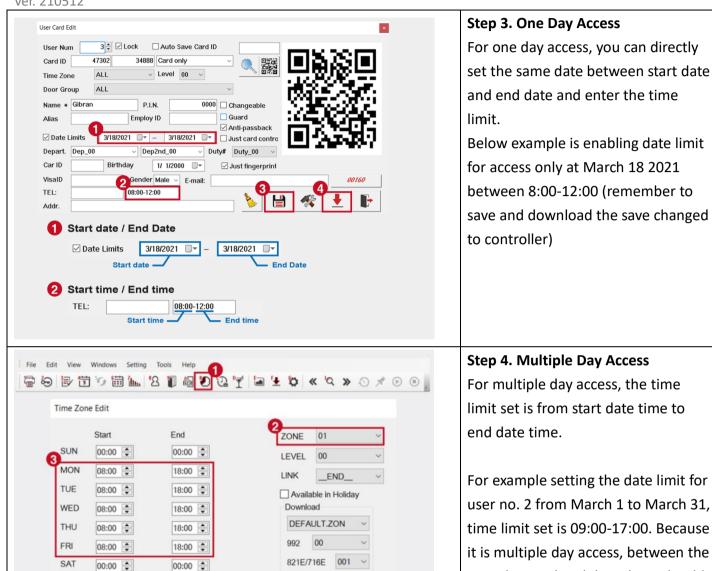

For multiple day access, the time limit set is from start date time to

For example setting the date limit for user no. 2 from March 1 to March 31, time limit set is 09:00-17:00. Because it is multiple day access, between the start date and end date there should be combined with timezone access. Example, time zone 1 is a set of timezone for weekday Mon, Tue, Wed, Thu, Fri for 08:00-18:00.


That way, User 2 access is: March 1 (start date) User 2 can access from 09:00 (start time, instead of 08:00 from timezone 1 setting)

March 2 until March 30 User 2 can access according to assigned

Save as Text

Exit



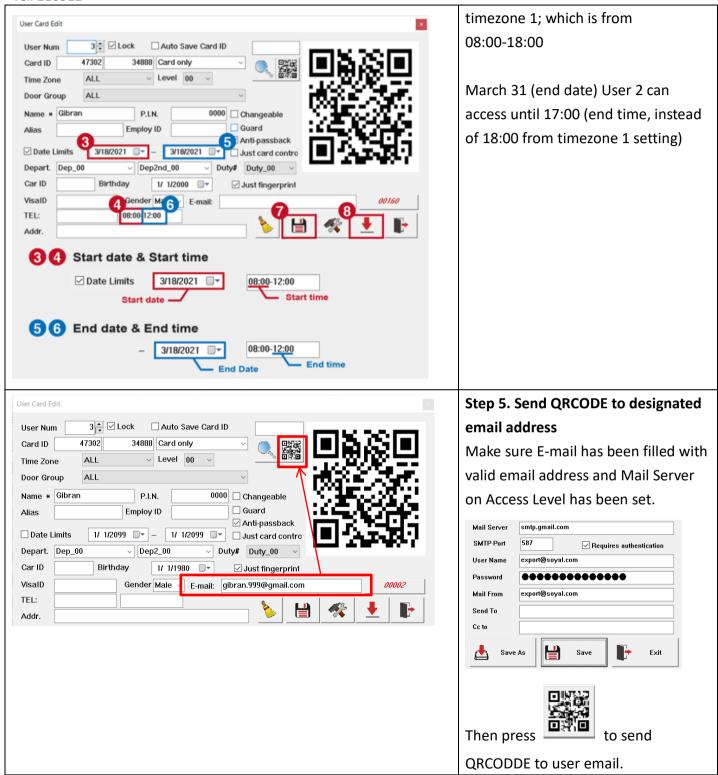




Ver. 210512

#### Part 2. Fire Event notification

Access controller under AR-727-CM-IO-0804M that connected to the Fire Detector Control Unit, built-in fire alarm interlinkage function that could trigger "Fire Alarm (DIO) Open Doors" under fire event, and then release all door lock of access controllers under AR-727-CM-IO-0804M, at the same time could send email to designated email address for real time notification of fire event.

#### RS485 CH1 & CH2

#### **Ethernet/UDP Broadcast**

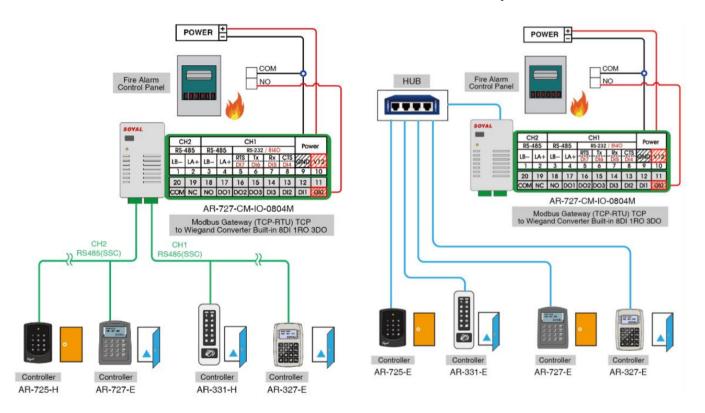


#### Setting:


#### Notes:

- 1. Update software & devices firmware version to the latest version.
- Upgrade AR-727-CM-IO-0804M into Firmware version: APX727i3\_\_\_\_V0500 8I8O 190930 UDP
   FireMessage.STM (If you have functional firmware requirements, please contact SOYAL sales team)
- 3. There are two ways of wiring to auto release all doors under fire alarm event, through RS485 CH1/CH2 OR Ethernet/UDP Broadcast




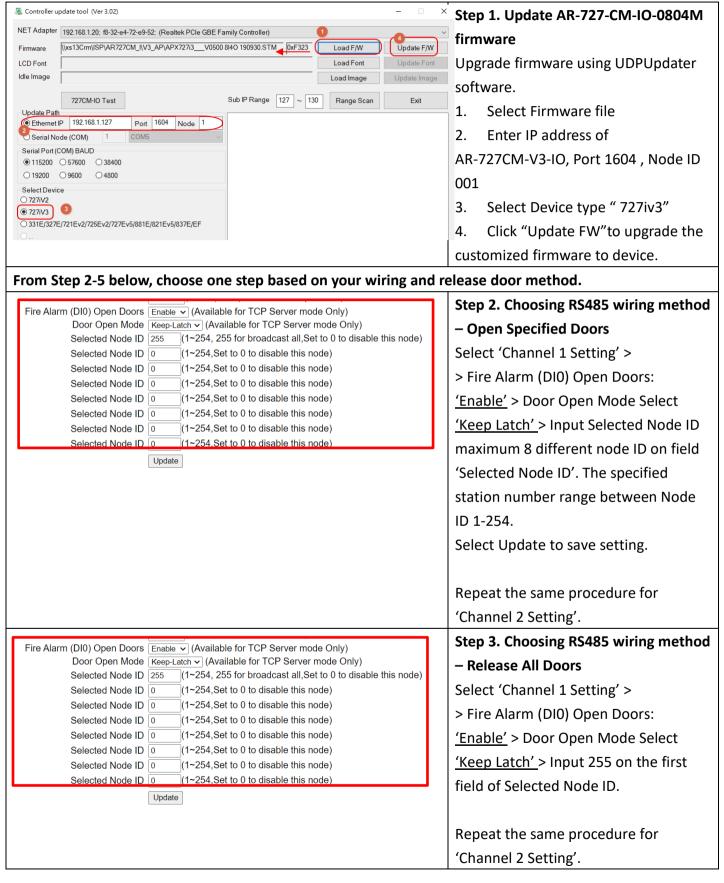



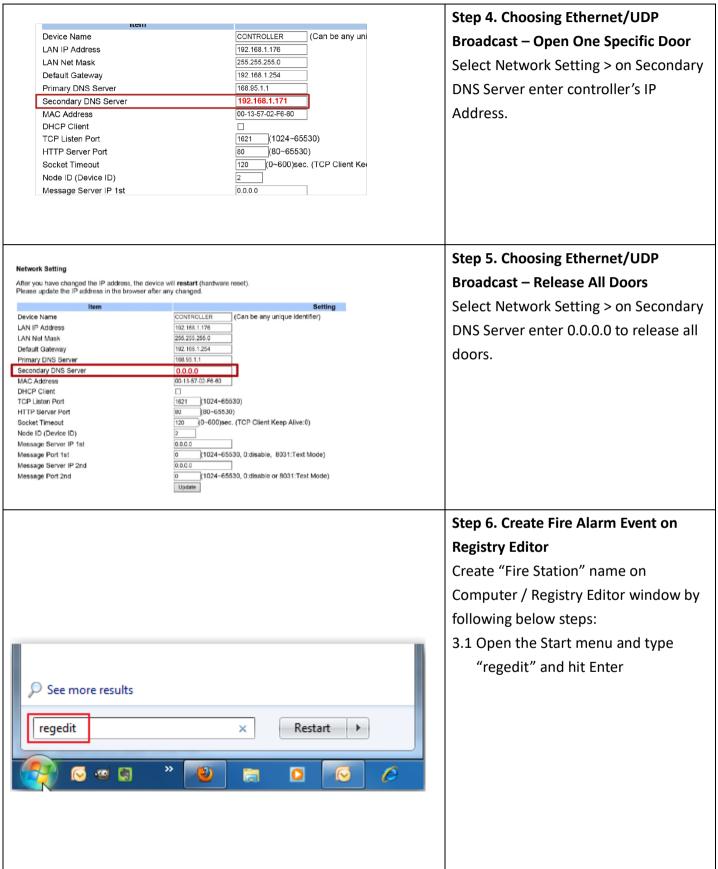




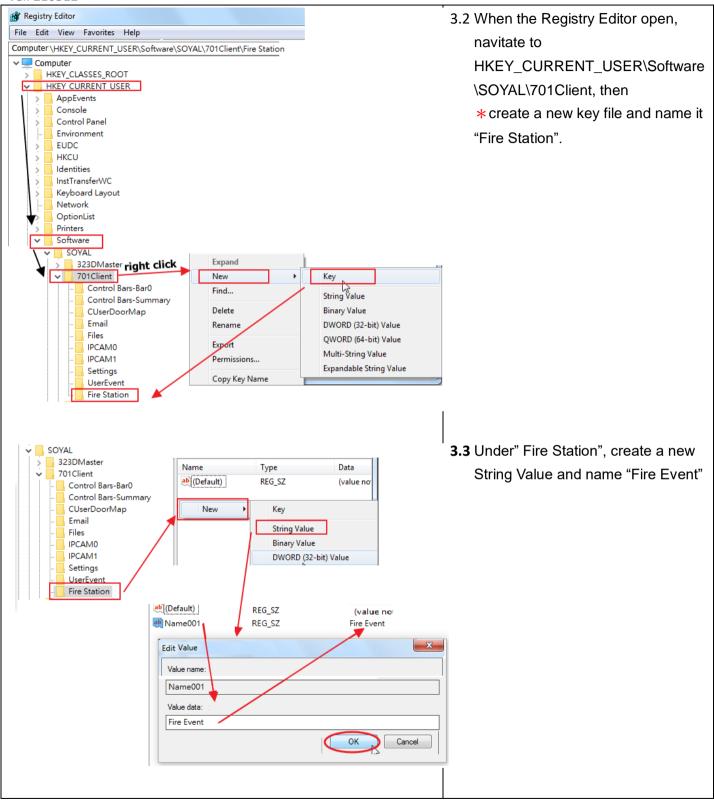



Ver. 210512

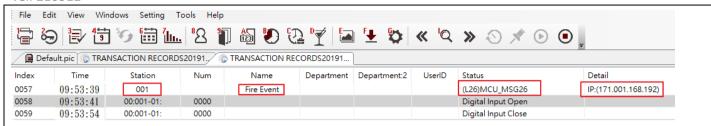


TEST: When fire occurs, 701Client software will receive the message from AR-727CM-V3 (the message include fire station name, IP address; At the same time, 701Client software will send the message to the assigned E-mail address.

#### Part 3. Alarming Event notification

After the 701 Client receives alarm message in event log forms, at the same time it could forward alarming event messages to up to 10 groups of management personnel Emails. All of the messages will display the date and time, location (controller), alarming type of events such as:

- Controller's offline
- Force open
- Door open too long
- Key-in wrong PIN or invalid card after maximum error reached.


Notes: you can set up to 10 different email address to receive the notification

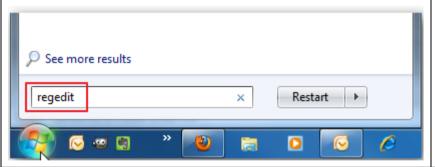

Step 1. Add email address of recipient of the abnormal event




Ver. 210512

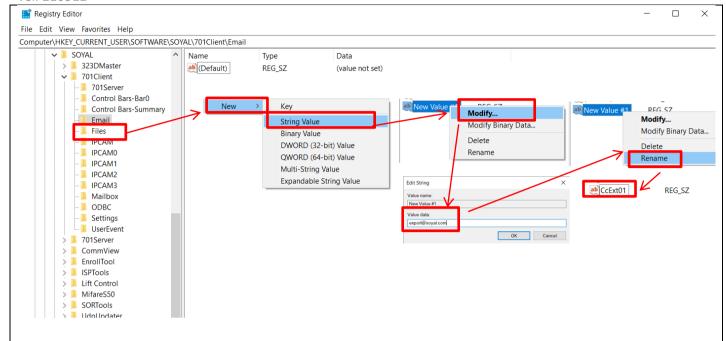

- Step 2. Go to Computer\HKEY CURRENT USER\SOFTWARE\SOYAL\701Client\Email
- Step 3. Right click and select New > String Value
- Step 4. New Value is created then right click > Modify > enter email address of the recipient
- Step 5. New Value has been set with email address, then right click > Rename > CcExt01

CcExt01 means the first recipient email, if you create more than one recipient repeat the same process but rename it differently to distinguish one another; example export@soyal.com is set as CcExt01, sales@soyal.com is set as CcExt02



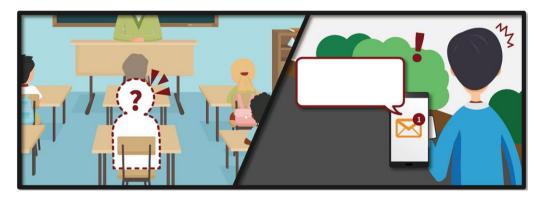


When a student does not arrive at school during class, the teacher can check the student's attendance status by using the daily record in the software, and send an email notification to parents that students is not attending school, so it is parents could get notified real time and know their children attendance status.

Notes:



#### Ver. 210512

1. Required custom software to support this feature (please contact SOYAL for custom software)

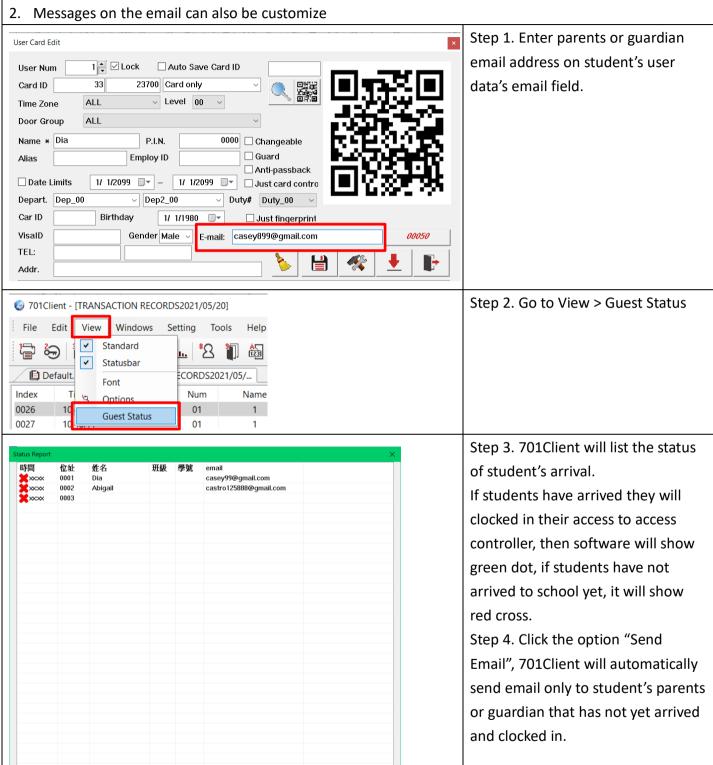


Send Email



Ver. 210512

#### Part 5. Letter Arrival on Mailbox Notification

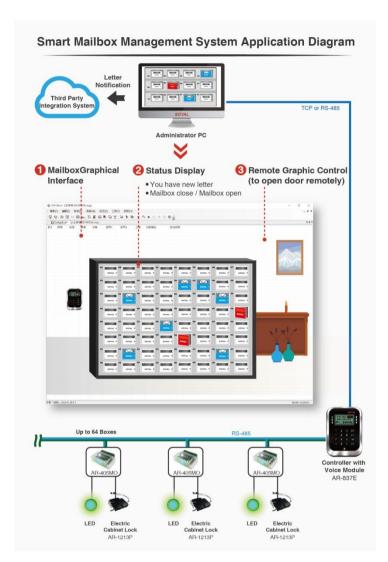

When letter or packages delivered to household's mailbox, the infrared I/O module installed in the mailbox detects the letter arrival and immediately sends signal to 701Client software installed at the management office through event log and at the same time if assigned personal email address is set could also send email notification to household. 701Client will also allow personnel to monitor which unit has letters or packages at one glance through Floor Plan feature.


Not only that, we also provide third-party integrated applications (such as mobile app property management systems) that could show pop up notification through mobile phone and post announcement or notice in residential area.

#### Notes:

- 1. This feature will allow software to show mailbox status such as letter/package arrival, mailbox door is close or open status, and alarming event; only applicable for installation with **64 units mailbox**.
- Controller AR-837-E firmware → APS837E \_\_\_\_\_V0403\_191016 USERNAME3\_MAILBOX\_64\_MONI.STM (please contact SOYAL team for firmware or other access controller model no. with the same feature)
- 3. Software must be the newest version
- 4. **Reserved user address** 0 as a correspondent between controller to each of the mailbox (AR-403-IO-0202M-IR)




Ver. 210512

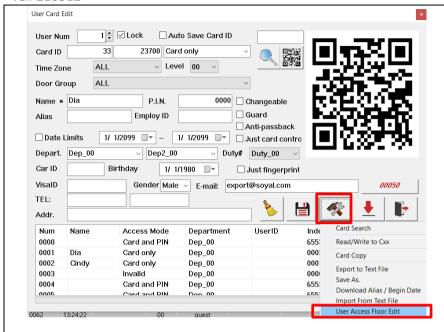


Step 1. After upgrading custom firmware for access controller, go to 701 Client 8. User Card Edit > Tool Box > User Access Floor Edit

#### Lift Floor Setting (example: User address 1)

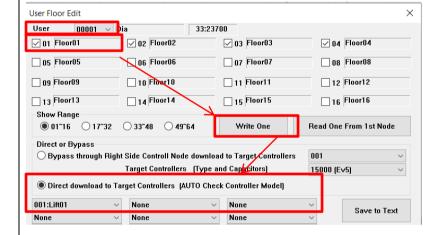

#### Mailbox Setting (example: enabling for User address 1)

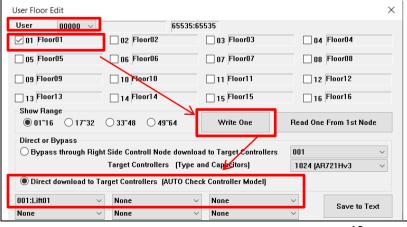

## Step 2. Set up access controller correspondent with AR-403-IO.

In this setting, we are using the same setting like in lift control where you can assign what floors every user can access.


The only different is, for lift floor you need to select user address, meanwhile for mailbox all setting is done on user 0.

To distinguish between lift floor and mailbox setting, here is the example: Dia (user number 00001) assign to access 01(floor01) and her mailbox is first mailbox 01(floor01), tick the box so it will enable mailbox01.

Step 3. Save setting by pressing 'Write One'

Step 4. Download to controller select



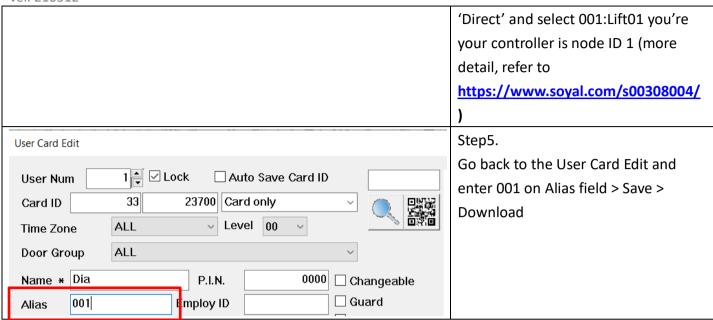

Mailbox	AR-403-DI2MO2-IR	Fill the corresponding Mailbox  Number at Alias field
1	001	001
2	002	002
3	003	003
64	064	064